CATERING

6990/06 **1 LITRE**

Appliance Descaler

USE A powerful acidic cleaning agent for the heavy duty removal of hard water limescale from kettles, catering equipment and dishwashing machines.

Suitable for use on stainless steel and chrome appliances.

For professional use only.

DIRECTIONS

Add prepared solution to the article to be cleaned, for best results heat to 50°C. Leave to soak until all scale has been removed. Rinse out thoroughly with clean water. To ensure no product residue remains a further second rinse is recommended.

For dishwashing machine descaling switch off dosing equipment.

Fill dishwasher with fresh water and add 200ml to the water.

Circulate the solution for 10-15 minutes. Drain and inspect for complete limescale removal. Fill dishwasher with fresh water and circulate with water only for 10-15 minutes. Allow to dry leaving door open. Switch on dosing equipment.

General Descaling	Dilute up to 1 part to 20 parts water.
Heavy Duty Descaling	Use neat.

TECHNICAL

Physical state: Colour: Odour: pH: Density

Liquid Amber Characteristic < 2 1.01 - 1.03









Greyland Ltd • Tameside Park Ind Est • SK16 4PP Tel: 0161 343 3830 • www.greyland.co.uk

